



## Windows ELM327 USB Setup Instructions

For everything ELM327 including troubleshooting tips and accessories, please access the Comprehensive ELM327 Guide: <http://interfusellc.com/elm327/>

### Windows ELM327 USB Setup

Setup of the OBD-II Interface is quick and easy and in just a few steps you will be connected and receiving information from your vehicle. Troubleshooting and suggestion bullet points are included in this setup guide but are included only as a point of reference to help you get connected and monitoring your vehicles vitals as quickly as possible.

1. Install the [ELM327 OBD2 software package](#) of your choice.
  - For ease of use we suggest the ScanMaster-ELM Demo or EasyOBD-II
2. Connect the ELM Interface to your computer and allow the drivers to automatically install.
  - Make sure your computer is connected to the internet and your computer is allowed to download new drivers.
  - If the drivers fail to install, attempt to [install the drivers manually](#).
3. Identify the COM-Port associated to the device in the Device Manager.
  - Consider opening the device manager before you plug in the OBD-II adapter so you can see the item added to the device list in real-time.
4. Start your vehicle or have the ignition switch on with power to the battery.
5. Connect your ELM327 Interface to the OBD-II adapter in your vehicle.
  - The OBD2 plug is normally located under the steering column; No tools are required to locate it. If you are having trouble, keep in mind that it is no further than 3 feet away from the driver.
6. Open the OBD-II software and connect to the interface by selecting the COM-Port associated to the device.
  - If the COM-Port is set higher than the software allows, you will need to change the COM-Port in the Device Manager by right clicking on properties. More information about this is provided in our Comprehensive ELM327 Guide.
  - If the software fails to connect to the interface, un-install it from the Device Manager and reinstall the drivers by plugging in back in.
7. Go online and connect to the vehicles ECU. Trouble codes and real-time data should now be available to you.

If you experience any difficulties please re-read the instruction sheet, reference the [ELM327 reference guide](#) and do not hesitate to post any questions to the comments section of the articles. We will do what we can to get you an answer in a timely manner.