



## Windows ELM327 Wi-Fi Setup Instructions

For everything ELM327 including troubleshooting tips and accessories, please access the Comprehensive ELM327 Guide: <http://interfusellc.com/elm327/>

### Windows Wi-Fi ELM327 Setup

Setup of the OBD-II Interface is quick and easy and in just a few steps you will be connected and receiving information from your vehicle. Troubleshooting and suggestion bullet points are included in this setup guide but are included only as a point of reference to help you get connected and monitoring your vehicles vitals as quickly as possible.

1. Start your vehicle or make sure the ignition switch has power to the battery.
2. Connect the ELM327 Interface to your vehicle.
3. Connect to the Wi-Fi OBD Network, if it asks for a password enter "12345678"
4. Locate your Wireless Adapter Settings within the Network Connections Control Panel > Right-Click Properties > Select Internet Protocol Version 4 > Click Properties. On the following screen assign the following IP Address: 192.168.0.11 and Subnet Mask: 255.255.255.0
5. Install and Open the [ScanMaster-ELM Demo Software](#)
6. Click Options, Communication and Set Interface Type: WLAN, IP Address: 192.168.0.10 & Port: 35000
7. Navigate to the Start Menu Tab and click Connect
8. The ELM327 adapter should begin sending real-time data and trouble codes to your computer.

If you experience any difficulties please re-read the instruction sheet, reference the [ELM327 reference guide](#) and do not hesitate to post any questions to the comments section of the articles. We will do what we can to get you an answer in a timely manner.